

# Electronic Pressure Independent Valves (ePIV)



# **Valve Innovations**

- Pressure independent valves compensate for pressure variations, performing a continual balancing function to maintain system performance at varying loads.
- Precise flow control eliminates over-pumping and provides favorable energy savings.
- · Equal percentage flow characteristics leads to system controllability.
- Pressure independent valves prevent energizing additional chillers by maintaining desirable Delta T.
- Pressure independent valves are selected based on flow rate and no Cv calculations are needed.

# **Features and Benefits**

- · Simplified valve sizing and selection, no Cv calculations required.
- Ultrasonic flow sensor, no maintenance required with no moving parts.
- True flow feedback or valve position feedback is available as 0-10 VDC or 2-10 VDC.
- Settings can be viewed or changed using the optional ZTH US or with a computer using the PC-Tool software.
- · Glycol compensation for the entire range.
- Bus communication BACnet and Modbus.

# **Electronic Pressure Independent Control Valves (ePIV)**



# Set-Up

### 2-WAY VALVE

# **SPECIFY UPON ORDERING**

NON-SPRING RETURN STAYS IN LAST POSITION LRX...Series NRX...Series ARX...Series GRX...Series EVX...Series **NC:** Normally Closedvalve will open as voltage increases.

**NO:** Normally Openvalve will close as voltage increases.

ELECTRONIC FAIL-SAFE AYS IN FAIL-SAFE POSITION


당

AKRX...Series GKRX...Series AVK...Series NC/FO Valve: Normally Closed-valve will open as voltage increases. Fail Action: Will fail open upon power loss. NC/FC Valve: Normally Closed-valve will open as voltage increases. Fail Action: Will fail closed upon power loss. NO/FC Valve: Normally Open-valve will close as voltage increases. Fail Action: Will fail closed upon power loss. NO/FO Valve: Normally Open-valve will close as voltage increases. Fail Action: Will fail open upon power loss.

NOTE: Feedback signal is always direct acting (2V close, 10V open).

# Functionality

The ePIV is a pressure independent control valve that incorporates a flow meter and a 2-way control valve. The actuator has a powerful algorithm that modulates the control valve to maintain the flow regardless of variations in system differential pressure. In addition, the ePIV provides a feedback as a 0-10 VDC or 2-10 VDC to the BMS system. Depending on the system requirement, this feedback can be configured to be either True Flow or Valve Position using the PC-Tool software.

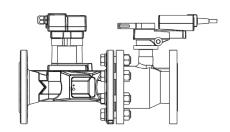

# Flow Characteristics and Tolerances


Flow Control Tolerance of the ePIV: ±5% of the actual Flow

Flow measurement tolerance  $\pm$  2% of the nominal flow.

V'nom = flow rating of valve as listed in catalog

The ePIV has an equal percentage flow curve. The equal percentage curve offers a more stable control for heating and cooling applications.

The flow characteristic and feedback can be changed from equal percentage to linear using the Belimo PC-Tool. Linear flow characteristic is used when controlling applications other than cooling/heating coils; like bypass control.

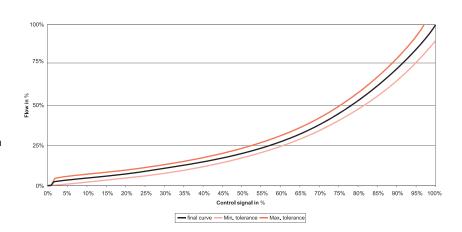

Fech. Doc - 5/20 - Subject to change. © Belimo Aircontrols (USA), Inc.



# Equal Percentage, Control Signal Vs. Flow Percentage

Controller Signal Actuator Feedback: Y/U5			Controller Signal Actuator Feedback: Y/U5			Controller Signal Actuator Feedback: Y/U5		
0.5-10 VDC Signal	2-10 VDC Signal	Water Flow in %	0.5-10 VDC Signal	2-10 VDC Signal	Water Flow in %	0.5-10 VDC Signal	2-10 VDC Signal	Water Flow in %
0.50	2.00	0%	3.73	4.72	12%	6.96	7.44	36%
0.60	2.08	0%	3.83	4.80	12%	7.06	7.52	37%
0.69	2.16	0%	3.92	4.88	13%	7.15	7.60	38%
0.79	2.24	0%	4.02	4.96	13%	7.24	7.68	39%
0.88	2.32	0%	4.11	5.04	14%	7.34	7.76	41%
0.98	2.40	0%	4.21	5.12	14%	7.43	7.84	42%
1.07	2.48	0%	4.30	5.20	15%	7.53	7.92	43%
1.17	2.56	2%	4.40	5.28	15%	7.62	8.00	45%
1.26	2.64	3%	4.49	5.36	15%	7.72	8.08	46%
1.36	2.72	3%	4.59	5.44	16%	7.81	8.16	48%
1.45	2.80	4%	4.68	5.52	16%	7.91	8.24	49%
1.55	2.88	4%	4.78	5.60	17%	8.00	8.32	51%
1.64	2.96	4%	4.87	5.68	18%	8.10	8.40	53%
1.74	3.04	5%	4.97	5.76	18%	8.20	8.48	54%
1.83	3.12	5%	5.06	5.84	19%	8.29	8.56	56%
1.93	3.20	5%	5.16	5.92	19%	8.39	8.64	58%
2.02	3.28	6%	5.25	6.00	20%	8.48	8.72	60%
2.12	3.36	6%	5.35	6.08	21%	8.58	8.80	62%
2.21	3.44	6%	5.44	6.16	21%	8.67	8.88	64%
2.31	3.52	7%	5.54	6.24	22%	8.77	8.96	66%
2.40	3.60	7%	5.63	6.32	23%	8.86	9.04	68%
2.50	3.68	7%	5.73	6.40	24%	8.96	9.12	70%
2.59	3.76	8%	5.82	6.48	24%	9.05	9.20	73%
2.69	3.84	8%	5.92	6.56	25%	9.15	9.28	75%
2.78	3.92	8%	6.01	6.64	26%	9.24	9.36	77%
2.88	4.00	9%	6.11	6.72	27%	9.34	9.44	80%
2.97	4.08	9%	6.20	6.80	28%	9.43	9.52	83%
3.07	4.16	9%	6.30	6.88	29%	9.53	9.60	85%
3.16	4.24	10%	6.39	6.96	29%	9.62	9.68	88%
3.26	4.32	10%	6.49	7.04	30%	9.72	9.76	91%
3.35	4.40	11%	6.58	7.12	31%	9.81	9.84	94%
3.45	4.48	11%	6.68	7.20	32%	9.91	9.92	97%
3.54	4.56	11%	6.77	7.28	33%	10.00	10.00	100%
3.64	4.64	12%	6.87	7.36	35%			

# **Electronic Pressure Independent Valves(ePIV)**



# Installation

# Inlet

The ePIV requires a section of straight pipe on the valve inlet to guarantee sensor accuracy. The length should be at least 5 diameters long.

½" [DN15] 5 x nominal pipe size = 2½" [63.5 mm]

34" [DN20] 5 x nominal pipe size = 34" [95.2 mm]

1" [DN25] 5 x nominal pipe size = 5" [127 mm]

1¼" [DN32] 5 x nominal pipe size = 6¼" [158.7 mm]

1½" [DN40] 5 x nominal pipe size = 7½" [190.5 mm]

2" [DN50] 5 x nominal pipe size = 10" [254 mm]


2½" [DN65] 5 x nominal pipe size = 12½" [317 mm]

3" [DN80] 5 x nominal pipe size = 15" [381 mm]

4" [DN100] 5 x nominal pipe size = 20" [508 mm]

5" [DN125] 5 x nominal pipe size = 25" [635 mm]

6" [DN150] 5 x nominal pipe size = 30" [762 mm]

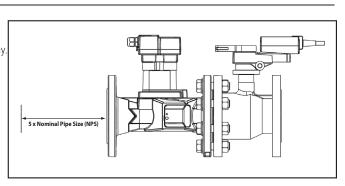

# **Outlet Length**

No requirements for outlet length.


Elbows can be installed directly after the valve.


# Actuator & Flow Sensor Removal

To replace flow sensor, isolation valves need to be closed or system needs to be drained.

# ½" to 6" ePIV

The flow sensor cannot be separated from the flow housing. However, it can be separated from the valve using the coupler/union connecting both.

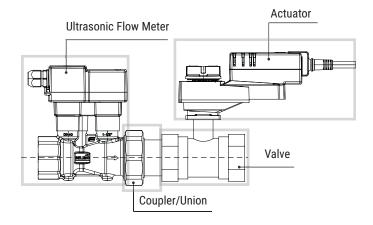

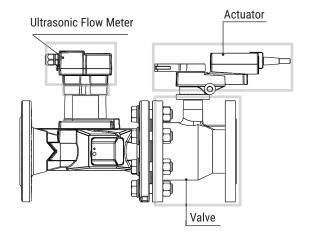


# Operation / Installation Electronic Pressure Independent Valves(ePIV)


# Orientation


ePIVs shall be installed with flow in the direction of the arrow on the valve body.

The valve assembly can be installed in a vertical or horizontal arrangement, as long as the actuator is positioned to avoid condensation



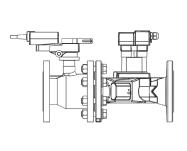

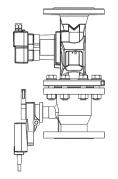

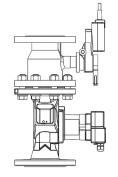



(Not for use with weather shields)

# Flow Reduction Chart

MAXIMUM FLOW BASED ON MINIMUM DIFFERENTIAL PRESSURE FOR ANSI 125 NPT MODELS

S	Size	0:	5 psi*	4 = 0:	2:	2:	1:	
Inches	DN [mm]	8 psi	o psi^	4 psi	3 psi	2 psi	1 psi	
1/2	15	5.5 GPM	5.5 GPM	5.5 GPM	5.5 GPM	4.8 GPM	3.4 GPM	
3/4	20	10.3 GPM	10.3 GPM	10.3 GPM	9.9 GPM	8.1 GPM	5.7 GPM	
1	25	18.2 GPM	18.2 GPM	18.2 GPM	17.2 GPM	14.1 GPM	9.9 GPM	
1¼	32	28.5 GPM	28.5 GPM	28.5 GPM	28.5 GPM	23.3 GPM	16.5 GPM	
1½	40	39.6 GPM	39.6 GPM	39.6 GPM	39.6 GPM	34.9 GPM	24.7 GPM	
2	50	100 GPM**	76.1 GPM	74 GPM	64.1 GPM	52.3 GPM	37 GPM	
2½	65	127 GPM	127 GPM	93 GPM	81 GPM	66 GPM	47 GPM	
3	80	180 GPM	180 GPM	138 GPM	120 GPM	97 GPM	69 GPM	
4	100	317 GPM	317 GPM	235 GPM	203 GPM	166 GPM	117 GPM	
5	125	495 GPM	495 GPM	367 GPM	318 GPM	260 GPM	183 GPM	
6	150	713 GPM	713 GPM	550 GPM	476 GPM	389 GPM	275 GPM	

<sup>\*</sup> Select valve based on a minimum of 5 PSI differential.

<sup>\*\*</sup> Applies to 2" EPIV model P2200SU-1000 only.


# **Electronic Pressure Independent Valves(ePIV)**



# **Piping**


The ePIV is recommended to be installed on the return side of the coil. This diagram is for typical applications only. Consult engineering specification and drawings for particular circumstances. Refer to Belimo documentation for flow verification and commissioning procedures.

It is not necessary to install one strainer per unit. Belimo recommends installing one strainer per system. If the system has multiple branches, it is recommended to install one strainer per branch.

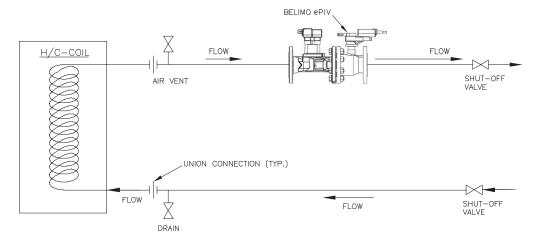


# Typical Parallel Piping in Relation to the Input and Output

To achieve flows larger than V'nom or nominal flow, it is recommended to connect two valves in parallel leading to a common manifold. To correctly operate these valves, the Multi-Function Technology (MFT) will be employed to utilize one common control signal. It is recommended to use the same signal in parallel (2-10 VDC); the two actuators are wired from the same control signal and the two valves control the flow in an identical pattern, the resulting flow will be double an individual valve.

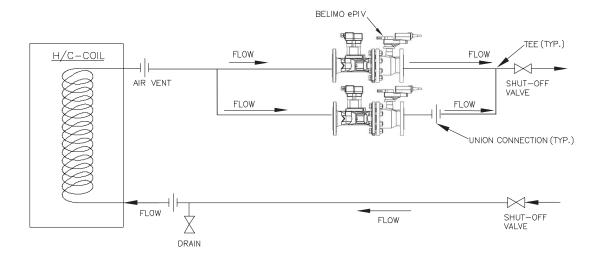

# Insulation:

The insulation should be below the actuator.

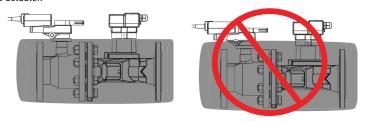

800-543-9038 USA 866-805-7089 CANADA 203-791-8396 LATIN AMERICA



# **Electronic Pressure Independent Valve (ePIV) Nomenclature**

P6	250SU	-127		+ARX	24	-EP2	-MOD
Electronic Pressure Independent Valve P2- NPT 2-way (½2") P6- Flanged 2-way (2½6")	Valve Size  050 = ½"  075 = ¾"  100 = 1"  125 = 1¼"  150 = 1½"  200 = 2"  250 = 2½"  300 = 3"  400 = 4"  500 = 5"  600 = 6"  SU = Ultrasonic Flow Sensor	Flow Rate 127 GPM Refer to valve pages for full list	Pressure Rating Blank = ANSI 125 -250 = ANSI 250	Actuator Type Non Fail-Safe LRX NRX ARX GRX Electronic Fail-Safe AKRX GKRX	Power Supply 24 = AC/DC 24 V	EP2 = ½6"  Modulating  Control	Modbus & BACnet communication*

<sup>\*</sup>Only available with non fail-safe actuators

# **Ordering Example**

Choose the valve actuator combination. P6250SU-127+ARX24-EP2

Specify maximum flow (Vmax)

Requested Flow

Vmax = 30...100% Vnom (nominal flow)

Specify preference or configuration.

Set-Up

Non Fail-Safe Models

**NO** = Normally Open

NC = Normally Closed

Electronic Fail-Safe Models

**NO/FO** = Normally Open/Fail Open

NO/FC = Normally Open/Fail Closed

NC/FO = Normally Closed/Fail Open

NC/FC = Normally Closed/Fail Closed

Control / Feedback signal

Y (0) 2...10 V / U 2...10 V

Y (0) 0.5...10 V / U 0.5...10 V Y (0) 2...10 V / U 2...10 V

Does order require tagging?

> Tagging: Valves may be tagged per customer specification. (\$12.00 charge per tag)

Example: AHU-1 FCU-2

Part number for tagging: 99981-00101

Complete Ordering Example: P6250SU-127+ARX24-EP2 Requested Flow: 100 GPM

Setup: NC

Control/Feedback Signal: Y (0) 2...10V / U 2...10V

Tag: FCU-2

NOTE: All models should be entered with the GPM designed - in case GPM is not provided this will come with V'nom set up.

800-543-9038 USA 866-805-7089 CANADA 203-791-8396 LATIN AMERICA



		Valve Nominal Size		Туре	Suitable Actuators		
	GPM	Inches	DN [mm]	2-way	Non Fail-Safe	Electronic Fail-Safe	
	5.5*	1/2	15	P2050SU-055	(QO)		
	10.3* 18.2*	3/4	20	P2075SU-103	LRX24-EP2(-MOD)		
		1	25	P2100SU-182	LRX2		
NPT	28.5*	1¼	32	P2125SU-285	4-EP2 0D)	2	
	39.6*	1½	40	P2150SU-396	NRX24-EP2 (-MOD)	AKRX24-EP2	
	76.1*	2	50	P2200SU-761	<u> </u>	AK	
	100*	2	50	P2200SU-1000**	ARX24-EP2 (-MOD)		
	127*	2½	65	P6250SU-127	ARX24-EI		
125	180*	3	80	P6300SU-180	*		
Flanged ANSI 125	317*	4	100	P6400SU-317	МОD)	P2	
Flanç	495*	5	125	P6500SU-495	GRX24-EP2 (-MOD)	GKRX24-EP2	
	713*	6	150	P6600SU-713	GRX2	Ď	
	127*	2½	65	P6250SU-127-250	ARX24-EP2 (-MOD)	AKRX24-EP2	
1 250	180*	3	80	P6300SU-180-250	ARX2 (-M	AKRX	
Flanged ANSI 250	317*	4	100	P6400SU-317-250	МОВ)		
Flan	495*	5	125	P6500SU-495-250	GRX24-EP2(-MOD)	GKRX24-EP2	
	713*	6	150	P6600SU-713-250	GRX2	5	

<sup>\*</sup>V'nom = Maximum flow for each valve body size. \*\* Fluid temperature range is 39...250°F [4...120°C].

Note: For all models, flows can be field set to 30% of nominal flow rate.



# **Mode of Operation**

The Electronic Pressure Independent Control Valve (ePIV) is a two-way valve which is unaffected by pressure variations in a system.

**Product Features**Provides constant flow regardless of pressure variations in the system. Simplified valve sizing and selection, no Cv calculations required.

Actuator	Specifications	

Control type	modulating
Manual override	LR, NR, AR, GR, AKR, GKR
Electrical connection	3 ft. [1 m] cable with ½" conduit fitting
Communication	analog and Belimo MP-Bus BACnet MS/TP, Modbus RTU (-MOD actuators)

	actuators)
Valve Specifications	
Fluid	chilled or hot water, up to 60% glycol
Flow characteristic***	equal percentage/linear
Sizes	½", ¾", 1", 1¼", 1½", 2", 2½", 3", 4", 5", 6"
End fitting	NPT female (½2") pattern to mate with ANSI 125 or 250 flange (2½6")
Materials Body	
Valve	brass, nickel plated (½2") cast iron-GG25 (2½6")
Sensor housing	forged brass, nickel plated (½2") ductile iron- GGG50 (2½6")
Ball	stainless steel
Stem	stainless steel
Characterizing disc	Tefzel® (½2") stainless steel (2½6")
Fluid temp range	14250°F [-10+120°C], 39250°F [4120°C] (P2200S-1000)
Body pressure rating	360 psi (½2") ANSI 125, Class B (2½6") ANSI 250 (2½6") (-250)
Close-off pressure	200 psid (½2") 100 psid (2½6") 310 psid (2½6") (-250)
Differential pressure range (∆P)	see technical documentation
Leakage	0%
Rangeability	100:1
Flow control tolerance	±5%
Flow measurement	

<sup>\*\*\*</sup>The flow characteristic can be changed by using the Belimo PC-Tool software.


±2%

tolerance

All flow tolerances @ 68...77°F [20...25°C] and 0% glycol.



# P2... Series Electronic Pressure Independent Valves (ePIV) Stainless Steel Ball, NPT Female Ends

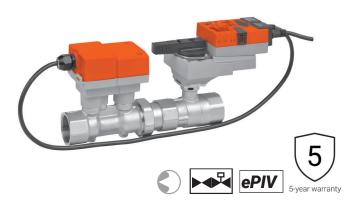

Valve Specifications	
Service	chilled or hot water, 60% glycol max (open loop/steam not allowed)
Flow characteristic	equal percentage / linear
Controllable flow range	75° rotation
Size	1/2", 3/4", 1", 11/4", 11/2", 2"
End fitting	NPT female ends
Materials	
Body	forged brass, nickel plated
Sensor Housing	forged brass, nickel plated
Ball	stainless steel
Stem	stainless steel
Seat	Teflon® PTFE
Characterizing disc	Tefzel®
0-ring	EPDM
Packing	EPDM
Body pressure rating	360 psi
Media temperature range	14°F to 250°F [-10°C to +120°C], 39°F to 250°F [4°C to 120°C]**
Noise level	<35 dB(A)
Leakage	0%
Close-off pressure	200 psi
Differential pressure range( $\Delta P$ )	1 to 50 psi*, 5 to 50 psi, 8 to 50 psi**
Inlet length required to meet specified measurement accuracy	5x nominal pipe size (NPS)
Humidity	<95% RH non-condensing
Flow metering technology	ultrasonic with temperature and glycol compensation
Flow control tolerance	±5%
Flow measurement tolerance	±2%***
Flow measurement repeatability	±0.5%
Rated impulse voltage	actuator/sensor: 0.8 kV (in accordance wit EN 60730-1)
Rangeability	100:1
Power supply for the flow sensor	sensor is powered by the actuator
Quality standard	ISO 9001
Agency listings	UL 60730-1/2-14, 2-18, CE according to 2004/108/EC and 2006/95/EC

<sup>\*</sup> See flow reduction chart on page 5.

# **Application**


Water-side control of heating and cooling systems for AHUs and heat pumps. Equal Percentage: Heating / cooling applications. Linear Characteristic: Bypass control.

# **Mode of Operation**

The Electronic Pressure Independent Control Valve is a two-way valve which maintains constant flow regardless of pressure variations in the system.

# **Product Features**

Provides constant flow regardless of pressure variations in the system. Maximizes chiller Delta T, preventing energizing additional chillers due to low Delta T. Simplified valve sizing and selection, no Cv calculations required.

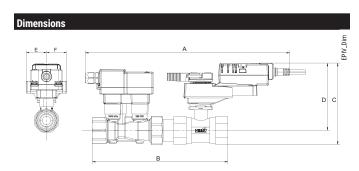

Valve	
Nominal Size	Dimensions (Inches [mm])

Incl	nes	DN [mm]	Α	В	С	D	E	F
1/2	,,	15	14.56" [370]	7.50" [191]	5.47" [139]	4.92" [125]	1.55" [39]	1.55" [39]
3/4	,,,	20	14.83" [377]	8.00" [203]	5.57" [141]	4.92" [125]	1.55" [39]	1.55" [39]
1	n	25	15.30" [390]	9.10" [231]	5.80" [147]	5.00" [127]	1.55" [39]	1.55" [39]
11/2	<b>4</b> "	32	16.37" [416]	10.00" [254]	6.08" [154]	5.15" [131]	1.73" [44]	1.73" [44]
17	ź"	40	16.76" [426]	10.78" [274]	6.65" [169]	5.55" [141]	1.73" [44]	1.73" [44]
2	n	50	17.04" [433]	11.18" [284]	6.89" [175]	5.59" [142]	1.73" [44]	1.73" [44]

	Valve Nominal Size				Actuator Type	
GPM	Inches	DN [mm]	2-way Female NPT	Non-Spring Return	Electronic Fail-Safe	
5.5	1/2"	15	P2050SU	LRX	AKRX	
10.3	3/4"	20	P2075SU	LRX	AKRX	
18.2	1"	25	P2100SU	LRX	AKRX	
28.5	1¼"	32	P2125SU	NRX	AKRX	
39.6	1½"	40	P2150SU	NRX	AKRX	
100**	2"	50	P2200SU	ARX	AKRX	

<sup>\*\*</sup> Applies to 2" EPIV model P2200SU-1000 only

<sup>\*\*\*</sup>All flow accuracies are @ 68°F (20°C).

# P6... Series Electronic Pressure Independent Valves (ePIV) Stainless Steel Ball, ANSI 125 Flange Ends





Technical Data	
Media	chilled or hot water, up to 60% glycol max
	(open loop/steam not allowed)
Flow characteristic	equal percentage or linear
Valve Size [mm]	2.5" [65]
Pipe connection	pattern to mate with ANSI 125 flange
Housing	Cast iron - GG 25
Flow measuring pipe	Ductile cast iron - GGG50
Ball	stainless steel
Stem	stainless steel
Seat	PTFE
0-ring	Viton
Characterised disc	stainless steel
Package	EPDM
Body Pressure Rating	ANSI Class 125, standard class B
ANSI Class	125
Differential Pressure Range	5 to 50 psid, 1 to 50 psid (with flow reduction. See chart.), or 8 to 50 psid (with flow increase. See chart.)
Close-off pressure ∆ps	100 psi
Ambient temperature	-22122°F [-3050°C]
Inlet Length to Meet Specified Measurement Accuracy	5X nominal pipe size (NPS)
Ambient humidity	max. 95% r.H., non-condensing
Measuring accuracy flow	±2%*
Control accuracy	±5%
Flow Measurement Repeatability	±0.5%
Sensor Technology	ultrasonic with glycol and temperature compensation
Rangeability Sv	100:1
Power supply for the flow sensor	sensor is powered by the actuator
Media Temp Range (water)	14250°F [-10120°C]
Leakage rate	0%

<sup>\*</sup>All flow tolerances are at 68°F (20°C) & water.

# **Application**

Water-side control of heating and cooling systems for AHUs and water coils. Equal Percentage/ Linear: heating and cooling applications.

# Operation

The Electronic Pressure Independent Control Valve is a two-way valve that maintains constant flow regardless of pressure variations in the system.

### **Product Features**


Valvo

Provides constant flow regardless of pressure variations in the system.

Maximizes chiller Delta T, preventing energizing additional chillers due to low Delta T.

Simplified valve sizing and selection, no Cv calculations required.

Suitable Actuators					
Non-Spring	Electronic fail-safe				
ARB(X)	AKRB(X)				
	Non-Spring				

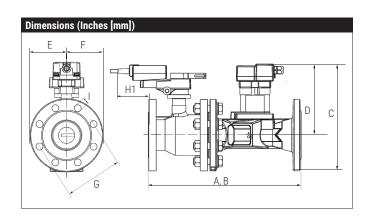

Vai Nomina				Dimen	sions (	Inches	[mm])				
In.	DN [mm]	# of Bolts	A	В	С	D	E	F	G	H1	-1
2½"	65	4	14.9" [379]	14.9" [379]	11.5" [292]	7.9" [200]	3.7" [95]	3.7" [95]	5.7" [145]	2.8" [72]	0.7" [19]
3"	80	8	16.9" [430]	16.9" [430]	11.8" [300]	7.9" [200]	3.9" [100]	3.9" [100]	6.3" [160]	2.1" [53]	0.7" [19]
4"	100	8	18.7" [474]	18.7" [474]	13.3" [337]	8.7" [221]	4.5" [114]	4.5" [114]	7.1" [180]	1.8" [46]	0.7" [19]
5"	125	8	22.8" [579]	22.8" [579]	14.4" [366]	9.4" [239]	5.0" [127]	5.0" [127]	8.3" [210]	0.8" [20]	0.7" [19]
6"	150	8	25.6" [651]	25.6" [651]	15.0" [380]	9.4" [239]	5.6" [142]	5.6" [142]	9.5" [241]	N/A	0.9" [22]

	Si	ze			
GPM	Inches	DN [mm]	2-way Flanged	Non-Spring Return	Electronic Fail-Safe
127	2½"	65	P6250SU	ARX	AKRX
180	3"	80	P6300SU	ARX	AKRX
317	4"	100	P6400SU	GRX	AKRX
495	5"	125	P6500SU	GRX	GKRX
713	6"	150	P6600SU	GRX	GKRX


Type

**Actuator Type** 

**Valve Nominal** 



# P6... Series Electronic Pressure Independent Valves (ePIV) Stainless Steel Ball, ANSI 250 Flange Ends

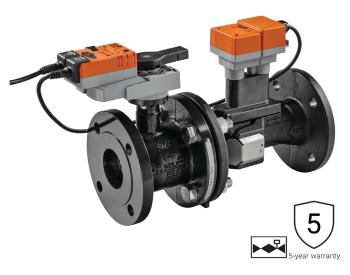

Technical Data Media	shilled or het water up to 60% glysel may
Media	chilled or hot water, up to 60% glycol max (open loop/steam not allowed)
Flow characteristic	equal percentage or linear
Valve Size [mm]	2.5" [65]
Pipe connection	pattern to mate with ANSI 250 flange
<u>'</u>	Cast iron - GG 25
Housing Flow measuring pipe	Ductile cast iron - GGG50
Rall	stainless steel
	otunnood otoo.
Stem	stainless steel
Seat	PTFE
O-ring	Viton
Characterised disc	stainless steel
Package	EPDM
Body Pressure Rating	ANSI Class 250, standard class B
ANSI Class	250
Differential Pressure Range	5 to 50 psid, 1 to 50 psid (with flow reduction. See chart.), or 8 to 50 psid (with flow increase. See chart.)
Close-off pressure ∆ps	310 psi
Ambient temperature	-22122°F [-3050°C]
Inlet Length to Meet Specified Measurement Accuracy	5X nominal pipe size (NPS)
Ambient humidity	max. 95% r.H., non-condensing
Measuring accuracy flow	±2%*
Control accuracy	±5%
Flow Measurement Repeatability	±0.5%
Sensor Technology	ultrasonic with glycol and temperature compensation
Rangeability Sv	100:1
Power supply for the flow sensor	sensor is powered by the actuator
Media Temp Range (water)	14250°F [-10120°C]
Leakage rate	0%
#All (launtalaurana and 60%F (00%O) 0	1

<sup>\*</sup>All flow tolerances are at 68°F (20°C) & water.

# **Application**

Water-side control of heating and cooling systems for AHUs and water coils. Equal Percentage/ Linear: heating and cooling applications.

# Operation

The Electronic Pressure Independent Control Valve is a two-way valve that maintains constant flow regardless of pressure variations in the system.


# **Product Features**

Provides constant flow regardless of pressure variations in the system.

Maximizes chiller Delta T, preventing energizing additional chillers due to low Delta T.

Simplified valve sizing and selection, no Cv calculations required.

Suitable Actuators					
	Non-Spring	Electronic fail-safe			
P6250SU-127-250	ARB(X)	AKRB(X)			

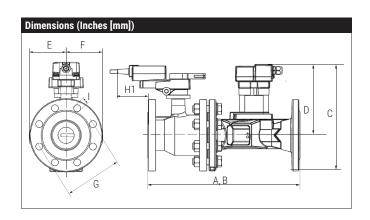

Val Nomina				Dimen	sions (	Inches	[mm])				
ln.	DN [mm]	# of Bolts	A	В	С	D	E	F	G	H1	1
2½"	65	8	15.4" [391]	15.4" [391]	11.5" [292]	7.6" [194]	3.7" [95]	3.7" [95]	5.9" [149]	3.9" [99]	0.9" [22]
3"	80	8	17.0" [433]	17.0" [433]	12.0" [305]	7.9" [200]	4.1" [105]	4.1" [105]	6.6" [168]	3.3" [85]	0.9" [22]
4"	100	8	18.7" [474]	18.7" [474]	13.1" [333]	8.1" [206]	5.0" [127]	5.0" [127]	7.9" [200]	3.1" [80]	0.9" [22]
5"	125	8	22.9" [581]	22.9" [581]	14.1" [358]	8.5" [216]	5.5" [140]	5.5" [140]	9.3" [235]	2.1" [53]	0.9" [22]
6"	150	12	25.7" [653]	25.7" [653]	15.3" [389]	9.0" [229]	6.3" [160]	6.3" [160]	10.6" [270]	1" [25]	0.9" [22]

	Si	ze			
GPM	Inches	DN [mm]	2-way Flanged	Non-Spring Return	Electronic Fail-Safe
127	2½"	65	P6250SU	ARX	AKRX
180	3"	80	P6300SU	ARX	AKRX
317	4"	100	P6400SU	GRX	AKRX
495	5"	125	P6500SU	GRX	GKRX
713	6"	150	P6600SU	GRX	GKRX

Type

Valve Nominal

**Actuator Type** 

# P2..., P6... Series Electronic Pressure Independent Valves (ePIV) Stainless Steel Ball, NPT Flange Ends (P2...) ANSI 125/250 Flange Ends (P6...)



# **Non-Spring Return Actuators**

AR Series LR Series GR Series NR Series

GR Series NR Series	
Actuator Specifications	
Power supply	24 VAC ± 20%
	24 VDC ± 10%
Electric Frequency	50/60 Hz
Power consumption	
LR Series	3.5W
NR Series	4.5W
AR Series	4.5W (½" to 2") 8.5W (2½" to 6")
GR Series	9.5W
Transformer sizing	
LR Series	6 VA (class 2 power source)
NR Series	7 VA (class 2 power source)
AR Series	7 VA (class 2 power source) (½" to 2") 11 VA (class 2 power source) (2½" to 6")
GR Series	13 VA (class 2 power source)
Electrical connection	18 GA, Plenum rated cable ½" conduit connector protected NEMA 2 (IP54) 3ft [1m] cable
Overload protection	electronic throughout 0° to 90° rotation
Operation range Y	2 to 10 VDC (default) VDC variable
Control	modulating
Input impedance	100 kΩ (0.1 mA), 500Ω
Feedback	2 to 10VDC (default), VDC variable
Torque	Les respectations (desidant), 120 rainable
LR Series	45 in-lbs [5 Nm]
NR Series	90 in-lbs [10 Nm]
AR Series	180 in-lbs [20 Nm]
GR Series	360 in-lbs [40 Nm]
Direction of rotation	electronically variable
Manual override	external push button
Running time normal operation	90 seconds
Humidity	5 to 95% RH, non-condensing
Ambient temperature	-22°F to 122°F [-30°C to 50°C]
Storage temperature	-40°F to 176°F [-40°C to 80°C]
Actuator/sensor	NEMA 2, IP54, UL enclosure type 2
Agency listings	cULus acc. to UL60730-1A/-2-14, CAN/CSA, CE acc. to 2004/108/EC and 2006/95/EC
Noise level	<45dB(A) at 90 seconds
Servicing	maintanence free
Quality standard	ISO 9001
Weight	
LR Series	1.50 lbs [.68 kg]
NR Series	1.20 lbs [.54 kg]
AR Series	2.65 lbs [1.2 kg]
GR Series	4.85 lbs [2.2 kg]

The ZTH US and the PC-Tool are tools created to easily adapt the flow settings for the ePIV in the field. It directly connects to the Belimo actuator.

# Operation

The actuator is electronically protected against overload.

The actuators use a brushless DC motor, which is controlled by an Application Specific Integrated Circuit (ASIC). The ASIC monitors and controls the actuators rotation and provides a digital rotation sensing (DRS) function to prevent damage to the actuator in a stall condition. Power consumption is reduced in a holding mode.

Add-on auxiliary switches or feedback potentiometers are easily fastened directly onto the actuator body for signaling and switching functions.

# **Electronic Fail-Safe Actuators**

AKR Series GKR Series

Actuator Specifications	
Power supply	24VAC ±20% 24VDC ±10%
Electric Frequency	50/60 Hz
Power consumption	
AKR Series	12W
GKR Series	14W
Transformer sizing	24 VA (class 2 power source)
Electrical connection	18 GA plenum rated cable ½" conduit connector protected NEMA 2 (IP54) 3 ft [1m] 10 ft [3m] 16 ft [5m]
Overload protection	electronic throughout 0° to 90° rotation
Operation range Y	2 to 10VDC (default), VDC variable
Input impedance	100 k $\Omega$ (0.1 mA), 500 $\Omega$
Feedback output U	2 to 10VDC, 0.5mA max, VDC variable
Torque	
AKR Series	180 in-lb [20Nm]
GKR Series	360 in-lb [40 Nm]
Direction of rotation	electronically variable
Fail-safe position	adjustable with dial or tool 0 to 100% in 10% increments
Manual override	external push button
Running time normal operation	90 seconds
Running time fail-safe	35 seconds
Humidity	5 to 95% RH non-condensing
Ambient temperature	-22°F to +122°F [-30°C to +50°C]
Storage temperature	-40°F to +176°F [-40°C to +80°C]
Actuator/sensor	NEMA2, IP54, UL enclosure type 2
Agency list	cULus acc. to UL 60730-1A/-2-14 CAN/CSA E60730-1:02 CE acc. to 2004/108/EEC and 2006/95/EC
Noise level	< 45dB(A)
Servicing	maintenance free
Quality standard	ISO 9001
Weight	
AKR Series	3.30 lb [1.5 kg]
GKR Series	5.51 lb [2.5 kg]



# **Electronic Pressure Independent Valves (ePIV) Wiring Diagrams**

# **Wiring Diagrams**



# X INSTALLATION NOTES



Provide overload protection and disconnect as required.



# **CAUTION** Equipment damage!

Actuators may be connected in parallel. Power consumption and input impedance must be observed.



Actuators may also be powered by 24 VDC.



Actuators with plenum rated cable do not have numbers on wires; use color codes instead. Wire numbers are provided for reference.



IN4004 or IN4007 diode required




# **APPLICATION NOTES**



Meets UL requirements without the need of an electrical ground connection.

# **WARNING** Live Electrical Components!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

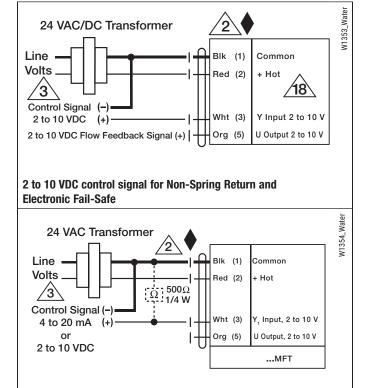


4 to 20 mA control signal for Non-Spring Return and

**Electronic Fail-Safe** 

# **System Ground**


In cases where the valve body is electrically isolated from the water pipe, an earth ground should be installed in order for the sensor to work properly. Earth ground can be connected directly on the sensor body. A connection point is provided on the flange of the sensor body (2½" to 6" only).



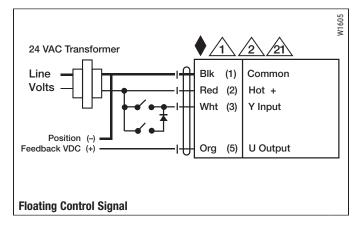

# **Electronic Pressure Independent Valves (ePIV) Wiring Diagrams**



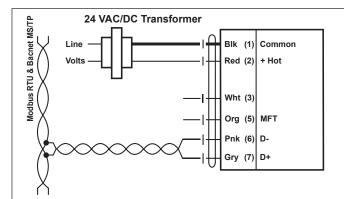


# Modbus & BACnet control for Non-Spring Return

### Note:

Modbus signal assignment: P


 $C_1 = D_- = A$  $C_2 = D_+ = B$  Power supply and communication are not galvanically isolated.

Interconnect ground signal of the devices.

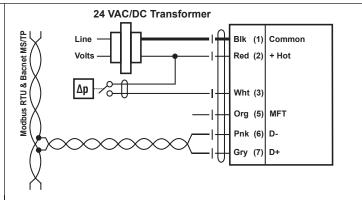

# Modbus & BACnet control with switching contact for Non-Spring Return Requirements for switching contact:


The switching contact must be able to accurately switch a current of 16 mA at 24 V.

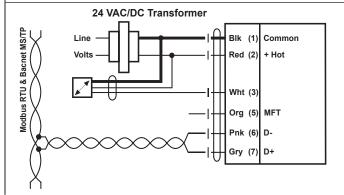

Modbus &BACnet control with active sensor for Non-Spring Return

# Possible input voltage range:

0...32 V (resolution 30 mV)

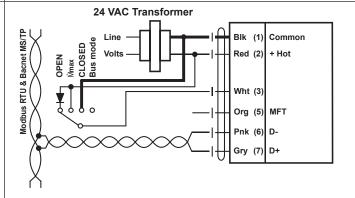

Modbus & BACnet control with local override (AC only, analog override) for Non-Spring Return

### Note:

If no sensor is integrated, then connection 3 (Y) is available for the protective circuit of a local override control. Options: CLOSED, Vmax, OPEN

BLK	RED	WHT	ORG	PNK	GRY
Black	Red	White	Orange	Pink	Gray
Negro	Rojo	Blanco	Anaranjado	Rosado	Gris
Noir	Rouge	Blanc	Orange	Rosa	Gris
Preto	Vermelho	Branco	Alaranjado	Cor-de ros	Cinza





# Installation Instructions Flanged Characterized Control Valves™

# **General Warnings**

Valve should not be used for combustible gas applications. Gas leaks and explosions may result. Do not install in systems, which exceed the ratings of the valve.

- Avoid installations where valve may be exposed to excessive moisture, corrosive fumes, vibration, high ambient temperatures, elements, or high traffic areas with potential for mechanical damage.
- Valve assembly location must be within ambient ratings of actuator.
   If temperature is below -22°F a heater is required.
- The valve assembly will require heat shielding, thermal isolation, or cooling if combined effect of medium and ambient temperatures – conduction, convection, and radiation – is above 122°F for prolonged time periods at the actuator.
- Visual access must be provided. Assembly must be accessible for routine schedule service. Contractor should provide unions for removal from line and isolation valves.
- Avoid excessive stresses. Mechanical support must be provided where reducers have been used and the piping system may have less structural integrity than full pipe sizes.
- Sufficient upstream piping runs must be provided to ensure proper valve capacity and flow response. See installation section for details.
- Life span of valve stems and 0-rings is dependent on maintaining non-damaging conditions. Poor water treatment or filtration, corrosion, scale, other particulate can result in damage to trim components. A water treatment specialist should be consulted.
- It is not necessary to install one strainer per unit. Belimo recommends installing one strainer per system. If the system has multiple branches, it is recommended to install one strainer per branch.

WARNING: Lift ePIV from valve body. Do not lift this valve by the actuator. Lifting the valve body by the actuator can break the linkage and void the warranty.

- Inspect shipping package, valve, linkage, and actuator for physical damage. If shipping damage has occurred notify appropriate carrier. Do not install.
- When replacing the ePIV, remove existing valve, linkage and actuator from the piping system.
- If actuator and linkage are removed, they must be reinstalled correctly. The actuator must be rotated so that the valve seats properly for close off.
- Install valve with the proper ports as inlets and outlets. Check that inlet and outlet of 2-way valves are correct. Flow direction arrows must be correct.
- 5. Blow out all piping and thoroughly clean before valve installation.
- 6. Clean fittings with wire brush and rag. Clean pipes, fittings, and valve before installation; check for any foreign material that can become lodged in trim components. Strainers should be cleaned after initial startup.
- Valve must be installed with the stem towards the vertical, not below horizontal.
- 8. These valves are designed to be installed between ANSI Class 125/150 flanges only.
- -250 models are designed to be installed between ANSI Class 250/300 flanges only.
- 10. Carefully follow installation using ANSI piping practices.



Parameter	PC-Tool	ZTH US	Description
Volume	Read Only	Read Only	The actual GPM flowing through the valve.
Setpoint	Read Only	Read Only	The limiting GPM for which the valve has been set.
Position	Read Only	Read Only	The valve position displayed in % of V'max.
Step			Override Command. The following commands are available:
- Open	Read/Write	Read/Write	Open - Overrides the valve to the fully open position.
- Close	Read/Write	Read/Write	Close - Overrides the valve to the fully closed position.
V'max	Read/Write	Read/Write	This is the limiting GPM for which the valve is set. Range is 30% - 100% of maximum flow of the valve.
PF-Delay	Read/Write	Read/Write	Power Fail-Safe Delay - Delay for the time to react on fail-safe operation.
MP Address	Read/Write	Read/Write	Belimo's proprietary communication protocol. Can be set from 1 to 8.
Valve Size	Read Only		The valve size set by the manufacturer.
Control Signal	Read/Write		The input from the DDC controller; 0.5V - 10 VDC and 2-10 VDC are available.
Control Signal Inverted	Read/Write		Inverts control signal, i.e. 2 VDC open, 10 VDC closed.
Feedback	Read/Write		The feedback signal from the actuator; 0.5V - 10 VDC and 2-10 VDC are available.
Valve Charactersitic	Read/Write		The valve can be configured for pressure dependent or pressure independent operation.
Bus Fail Position			The predetermined fail position of the valve. The following options are available:
- Last Setpoint	Read/Write		Last Setpoint - Volumetric flow in accordacnce with the last setpoint received.
- Open	Read/Write		Open - Overrides the valve to the fully open position.
- Close	Read/Write		Close - Overrides the valve to the closed position.
- V'max	Read/Write		The limiting GPM for which the valve is set.
Feedback Characteristic	Read/Write		Equal Percentage (EQ%) and linear
Control Characteristic	Read/Write		Equal Percentage (EQ%) and linear



The ZTH US is a tool created to easily adapt the flow settings for the ePIV in the field. It directly connects to the Belimo actuator.

# **CONNECTION PROCESS:**



AR, GR, LR, NR, AK, GK, EV, AVK Series
Use the interface on the top of the actuator.
(Leave all of the wires of the actuator installed.)



# **Technical Information**

Supply	24 VAC/DC
Communication	PP
Used with actuator types	ARX24 AKRX24 GRX24 GKRX24 LRX24 NRX24 EVX AVKX

# **RE-PROGRAMMING PROCESS:**

# **Initial Screen**

Connect cable to actuator port, twist to lock in place. Will display the handheld software and hardware versions for 5 seconds then it will display the actuator being connected



### Screen '

Start ePIV process by pressing the up arrow (ESC) The first screen displays the MFT adress, press ESC to continue to the next screen.



# Fech. Doc - 5/20 - Subject to change. © Belimo Aircontrols (USA), Inc.

# Operating Instructions ZTH US

# Screen 2

To change the Vmax value press the – button until you reach the required value then press the OK button.



# Screen 4

Press the +/- buttons to select different override commands, once selected press OK to execute.

**AUTO: Automatic Operation** 


OPEN: Overrides the valve to the maximum rotation (90°) CLOSE: Overrides the valve to minimum rotation (0°) Vmax: Overrides the valve to its maximum GPM STOP: Overrides the valve to the last valve position

Note: The override remains active even after you disconnect the ZTH US, it is released using the AUTO command or cycling power on the actuator.



# Screen 6

This screen displays the current GPM and the setpoint send by the controller. The voltage signal is converted to GPM in the actuator. This can be used to troubleshooting to verify the signal send by the controller and to verify Setpoint vs. Actual flow.

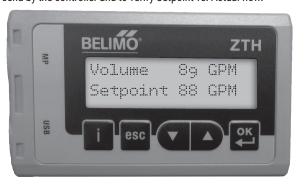



# Screen 3

A message is displayed "Y and U5 Adjusted" for 5 seconds. Then the new Vmax value is displayed. Press ESC to continue to the next screen or simply disconnect the device from the actuator.



# Screen 5

This screen displays the current GPM and valve position. This is used for troubleshooting. A small valve position and large GPM reading might indicate overpressure in the system. A small flow and a big valve position might indicate that there is not enough flow or pressure in the system.





Troubleshooting					
Problem	Green LED	Valve Position	Feedback Signal	Possible Cause	Possible Solution
The LED on the actuator is not green.	OFF	Static on the last position.	-	The actuator is not powered. The actuator is out of service.	Verify the power supply and the electrical components (fuse, on/switches, etc). If the actuator is out of service send the actuator and the sensor back to Belimo, please do not disconnect the assembly.
Requested flow can not be reached: U5 is lower than Y.	ON	Fully Open	Below setpoint U5 <y< td=""><td>Dp is too low. The requested flow can not be reached.</td><td>Increase the pump power.</td></y<>	Dp is too low. The requested flow can not be reached.	Increase the pump power.
Wrong flow rate measurements.	ON	-	-	"Scaling adjusted" PC-Tool or ZTH US.     Requirements regarding media are not taken into consideration.     5x DN as an inlet length is not taken into consideration.     The installation wiring is not equipotential.     Dp too high.	Default to factory settings. Check the datasheet for media options. Piping should be modified to fulfill the minimum inlet length. Check earth ground connection. Adjust the Dp to lower value.
Flow measurements are not stable.	ON	Cyclic Movement	-	The electrodes are not in proper contact with the fluid.	Remove air from the system. Verify proper installation. Ensure electrodes are always in contact with the fluid.

# **Actuator Adaptation**



The adaptation button calibrates the actuator input signal range (2-10V) to the actuator's angle of rotation range. It does that by driving the actuator to the mechanical end stops. After the adaptation cycle, the actuator will follow the current input signal. By default, the actuator will run the adaptation cycle after the first power up.

Belimo recommends performing a manual adaptation to the actuator after changing the actuator V'max or direction settings. The manual adaptation can be activated by pressing the translucent "Adaptation" LED button for three seconds.





# BACnet & Modbus Operating Instructions ZTH US

# Screen 1

Ensure you are using the correct -MOD actuator



# Screen 2 Setpoint source can be selected: Analog: Control from the controller (0.5-10V or 2-10) Bus: Control from Bus Communication BACnet or Modbus Default: Bus BELIMO Setpoint source Analog or Bus

Screen 3a - 8a


Bus Protocol - BACnet









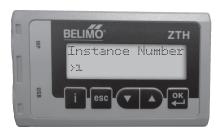



# Screen 3b - 8b

Bus Protocol - Modbus













# ePIV BACnet Description



# **General information**

25.03.2019
BELIMO
423
2-way EPIV
P2MOD, P6MOD
03.04-0000
08.03.0003
12
Communicative characterised control valve with
sensor-operated flow control, 2-way
BACnet Application Specific Controller (B-ASC)
No
MS/TP master
No static device binding supported
None
ISO 10646 (UTF-8)
None
Non-secure device
Listed by BTL

BACnet Interoperability Building Blocks supported BIBBs

Data sharing – ReadProperty-B (DS-RP-B)

Data sharing – ReadPropertyMultiple-B (DS-RPM-B)

Data sharing – WriteProperty-B (DS-WP-B)

Data sharing – COV-B (DS-COV-B)

Device management – DynamicDeviceBinding-B (DM-DDB-B)
Device management – DynamicObjectBinding-B (DM-DOB-B)
Device management – DeviceCommunicationControl-B (DM-DCC-B)

**BACnet MS/TP** 

Baud rates	9'600, 19'200, 38'400, 76'800 (Default: 38'400)
Address	0127 (Default: 1)
Number of nodes	Max 32 (without repeater), 1 full busload
Terminating resistor	120 Ω
Tool	ZTH LIS

# **Parameterisation**



All writeable objects which are persistent and are **not** supposed to be written on a regular base.





# **BACnet - Protocol Implementation Conformance Statement (PICS)**

# **Standard Object Types Supported**

Object type	Optional properties	Writeable properties
Device	Description	Object Identifier
	Location	Object Name
	Active COV Subscriptions	Location
	Max Master	Description
	Max Info Frames	APDU Timeout (1'00060'000)
	Profile Name	Number of APDU Retries (010)
		Max Master (1127)
		Max Info Frames (1255)
Analog Input [AI]	Description COV Increment	COV Increment
Analog Output [AO]	Description	Present Value
	COV Increment	COV Increment
		Relinquish Default
Analog Value [AV]	Description	Present Value
	COV Increment	COV Increment
Binary Input [BI]	Description	
	Active text	
	Inactive Text	
Multi-state Input [MI]	Description	
	State Text	
Multi-state Output [MO]	Description	Present Value
	State Text	Relinquish Default
Multi-state Value [MV]	Description	Present Value
	State Text	

The device does not support the services CreateObject and DeleteObject.

The specified maximum length of writable strings is based on single-byte characters.

- Object name: 32 charLocation: 64 char
- Description: 64 char

# Service processing

The device supports the DeviceCommunicationControl and ReinitializeDevice services. No password is required.

A maximum of 6 active COV subscriptions with a lifetime of 1...28'800 sec. (8 hours) are supported.


# **Quick addressing**

Actuators support quick addressing via the "Address" and "Adaption" buttons. For detailed information, please see product datasheet (chapter Service).

# ePIV BACnet Object Description List



Object Name	Object Type [Instance]	Description Comment	Values	COV Increment	Access
		Status_Flags			
Device	Device [Inst.Nr]		04'194'302 Default: 1	_	W
RelPos	AI[1]	Relative Position in %  Overridden = true, if the gear is disengaged	0100	0.01100 Default: 1	R
AbsPos	AI[2]	Absolute Position in degree or mm The unit depends on the device: [°] for actuators with rotary movement [mm] for actuators with linear movement Overridden = true, if the gear is disengaged	0max angle	0.0165'535 Default: 1	R
SpAnalog	Al[6]	Analog Setpoint in % Shows the setpoint in % if actuator is control by analog signal (SpSource MV[122] is analog(1))  If SpSource MV[122] is Bus(2) then Out_Of_Service is TRUE	0100	0.01100 Default: 1	R
RelFlow	AI[10]	Relative Flow in %	0100	0.01100 Default: 1	R
AbsFlow_UnitSel	AI[19]	Absolute Flow in unit selected Flow in unit selected in MV[121]	0Vnom	0.011'000 Default: 1	R
Sens1Analog	AI[20]	Sensor 1 as analog value in mV / - Current value of sensor 1 in case Sensor1Type MV[220] is Active  If Sens1Type MV[220] is not Active(2) or SpSource MV[122] is Analog(1) then Out_Of_Service is TRUE	-	0.011'000 Default: 1	R
SpRel	AO[1]	Relative Setpoint in % Setpoint for actuator between 0 and Max AV[98] if controlled via bus  If SpSource MV[122] is Analog(1) then Out Of Service is TRUE	0100 Default: 0	0.01100 Default: 1	С
Max	AV[98]	Max Setpoint in % Vmax has to be ≥ 30%	30100 Default: 100	0.01100 Default: 1	W
Vnom_UnitSel	AV[104]	Nominal Flow in unit selected Vnom in unit selected in MV[121]	-	0.01100 Default: 1	R
Bus Watchdog	AV[130]	Timeout for Bus Watchdog in s  0 = watchdog deactivated  If the Present_Value is not ZERO, the implementation tracks write procedures to Present_Value of AO[1] and MO[1]  If the Present_Value of AO[1] or MO[1] is written, the timer is reset. Upon timeout the Priority_Array of the AO[1] is cleared and the Reliquish_Default becomes valid  In Hybrid Mode (SpSource MV[122] is Analog(1)) the implementation tracks write procedures to Present_Value of MO[1]	03'600 Default: 0	0.011'000 Default: 1	W

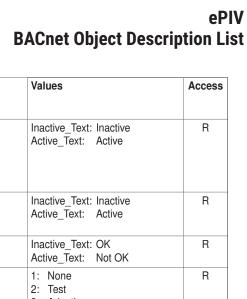



Object Name	Object Type [Instance]	Comment	Values	Access
Sens1Switch	BI[20]	Sensor 1 as Switch Indicates value on sensor 1 in case Sensor1Type MV[220] is Switch(5)	Inactive_Text: Inactive Active_Text: Active	R
		If Sens1Type MV[220] is not Switch(5) or SpSource MV[122] is Analog(1) then Out_Of_Service is TRUE		
BusTermination	BI[99]	Bus Termination Indicates if bus termination (120 $\Omega$ ) is enabled. Bus termination can be set with the configuration tools.	Inactive_Text: Inactive Active_Text: Active	R
SummaryStatus	BI[101]	Summary Status Summary of all Status (MI[106], MI[110])	Inactive_Text: OK Active_Text: Not OK	R
InternalActivity	MI[100]	Internal Activity Test: Internal test running, activated by bus Adaption: Adaption is running	1: None 2: Test 3: Adaption	R
StatusActuator	MI[106]	Status Actuator  Actuator cannot move: Mechanical overload e.g. blocked actuator, etc. Gear disengaged: Button is pressed Mechanical travel increased: The actuator has been moved outside the adapted working range	1: OK 2: Actuator cannot move * 3: Gear disenganged 4: Mechanical travel increased *	R
StatusDevice	MI[110]	Status Device Indicates general status about the device Bus Watchdog triggered: Timeout for Bus Watchdog expired	OK     Bus Watchdog triggered	R
Override	MO[1]	Override Control Override the setpoint (SpRel AO[1] or analog signal) with defined values	1: None 2: Open 3: Close 4: Min_Vmin 5: Mid_Vmid 6: Max_Vmax Default: None(1)	С
Command	MV[120]	Initiate Function Initiation of actuator functions for service and test. After command is sent, value returns to None(1). With Reset(4) all status in StatusActuator MI[106] can be reset	1: None 2: Adaption 3: Test 4: Reset Default: None(1)	W
UnitSelFlow	MV[121]	Unit Selection Flow The selected unit is valid for AI[19] and AV[104]	1: m³/s 2: m³/h 3: l/s 4: l/min 5: l/h 6: gpm 7: cfm Default: m³/h(2)	W
SpSource	MV[122]	Setpoint Source  If Analog(1) then actuator is controlled by analog signal 010 V on wire 3.  If Bus(2) then setpoint via bus SpRel AO[1]	1: Analog 2: Bus Default: Bus(2)	W
ControlMode	MV[123]	Control Mode PosCtrl: Position Control FlowCtrl: Flow Control	1: PosCtrl 2: FlowCtrl Default: FlowCtrl(2)	W
Sens1Type	MV[220]	Sensor 1 Type  If SpSource MV[122] is Analog(1) then Out_Of_Service is TRUE	1: None 2: Active / Hybrid 3: - 4: - 5: Switch 6: - 7: - 8: - 9: - 10: - 11: - Default: None(1)	W

Access: R = Read, W = Write, C = Commandable with priority array  $^*$  Status information must be reset Command MV[120] -> Reset(4)

800-543-9038 USA 866-805-7089 CANADA 203-791-8396 LATIN AMERICA



Genera	l informatio	n
--------	--------------	---

**Modbus RTU** 

Date	25.03.2019
Product Name	2-way EPIV
Actuator type	P2MOD, P6MOD
Protocol	Modbus RTU over RS-485
Transmission formats	1-8-N-2, 1-8-N-1, 1-8-E-1, 1-8-O-1 (Default: 1-8-N-2)
Baud rates	9'600, 19'200, 38'400, 76'800, 115'200 Bd (Default: 38'400 Bd)
Address	1247 (Default: 1)
Number of nodes	Max. 32 (without repeater)
Terminating resistor	120 Ω
Taal	7TU LIC

# Parameterisation

**Quick adressing**Actuators support quick addressing via the "Address" and "Adaption" buttons. For detailed, information please see product datasheet (chapter Service).

# Register implementation

All data is arranged in a table and addressed by 1..n (Register No.) or 0..n-1 (Address). No distinction is made between data types (Discrete Inputs, Coils, Input Registers and Holding Registers). As a consequence, all data can be accessed with the two commands for Holding Register. The commands for Discrete Inputs and Input Registers can be used as an alternative.

### Commands

Standard commands: Read Holding Registers [3] Write Single Register [6] Optional commands: Read Discrete Inputs [2] Read Input Registers [4] Write Multiple Registers [16]

### Command "Read Discrete Inputs"

The command reads one or more bits and can alternatively be used for Register No. 105 (Malfunction and Service information).

Example

The start address to be used is 1664 → 104 (Register Address) \* 16 (Bit) = 1664

# Interpret values in the registers

All values in the register are unsigned integer datatypes.

Example

Read (Function 03, 1 Register) Value Register No. 12 = 0001'1010'1100'1100'2 = 6'85610 Actual Value = Value \* Scaling factor \* Unit = 6'856 \* 0.01 \* m3/h = 68.56 \* m3/h

# 32-Bit values in two registers

Values that exceed 65,535 are stored in two consecutive Registers and have to be interpreted as "little endian" / LSW (Least Significant Word) first

# Example

Register No. 10 (AbsFlow LowWord) =  $14,55110 = 0011'1000'1101'0111_2$ Register No. 11 (AbsFlow HighWord) =  $1910 = 0000'0000'0001'0011_2$ 

AbsFlow HighWord	AbsFlow LowWord
19	14,551
0000'0000'0001'00112	0011'1000'1101'01112

AbsFlow =  $0000'0000'0001'0011'0011'1000'1101'0111_2 = 1,259,73510 = 1259.735 l/h$ 

Math formula:

AbsFlow = ( AbsFlow HighWord \* 65,536 ) + AbsFlow LowWord AbsFlow = ( 19 \* 65,536 ) + 14,551 = 1,259,735 = 1259.735 I/h

# **Deactivated registers**

If a register is not supported by a device or by a device setting it is indicated with  $65^{\circ}535$  ( $1111^{\circ}1111^{\circ}1111^{\circ}1111_{2}$ ).



All writeable registers on registers >100 are persistent and are **not** supposed to be written on a regular base.



# Operation

No.	Address	Register	Access
1	0	Setpoint [%]	R/W
2	1	Override control	R/W
3	2	Command	R/W
4	3	Actuator type	R
5	4	Relative position [%]	R
6	5	Absolute position [°] [mm]	R
7	6	Relative volumetric flow [%]	R
8	7	Absolute volumetric flow [m³/h]	R
9	8	Sensor value 1 [mV] [-]	R
10	9	_	_
11	10	Absolute volumetric flow in unit selected	R
12	11	HighWord	п
13	12	Setpoint analog [%]	R

# Service

No.	Address	Register	Access
100	99	Bus termination	R
101	100	Series number 1st part	
102	101	Series number 2 <sup>nd</sup> part	R
103	102	Series number 4 <sup>th</sup> part	
104	103	Firmware version	R
105	104	Malfunction and service information	R
106	105	_	_
107	106	Max [%]	R/W
108	107	Sensor type 1	R/W
109	108	Bus fail position	R/W
110	109	Communication Watchdog	R/W
111	110	Nominal volumetric flow [m <sup>3</sup> /h]	R
112	111	_	_
113	112	Nominal volumetric flow in unit selected	В
114	113	HighWord	K
115	114	_	_
116	115	_	_
117	116	Control Mode	R/W
118	117	Unit Selection Flow	R/W
119	118	Setpoint source	R/W

# ePIV Modbus Register



# **Modbus Register Description**

No.	Address	Description Comment	Range Enumeration	Unit	Scaling	Access
1	0	Setpoint	010'000	%	0.01	R/W
•	Ŭ	Setpoint for actuator between 0 and Max (No. 107)	Default: 0	,,,	0.01	117, 11
2	1	Override Control	0: None	_	_	R/W
_		Override setpoint with defined values	1: Open			,
		overnae copenie with actinou values	2: Close			
			3: Min			
			4: Mid 5: Max			
			Default: None(0)			
3	2	Command	0: None	_	_	R/W
Ü	_	Initiation of actuator functions for service and test	1: Adaption			117 11
		After command is sent, register returns to None(0)	2: Test			
		With Reset(4) all Malfunction and Service Information (Register No. 105)	3: Sync			
		Information can be reset.	4: Reset			
4	3	A-ttT	Default: None(0)			
4	3	Actuator Type	O: Actuator not connected     1: Air / Water	_	_	R
			2: VAV / EPIV			
			3: Fire			
			4: Energy Valve			
			5: 6way EPIV			
5	4	Relative Position	010'000	%	0.01	R
6	5	Absolute Position	0max angle / stroke		1	R
		The unit depends on the device:		mm	'	
		[°] for actuators with rotary movement [mm] for actuators with linear movement				
7	6	Relative volumetric flow	010'000	%	0.01	R
		Relative volumetric flow of Vnom				
8	7	Absolut volumetric flow	0Vnom	m³/h	1	R
				Pa		
9	8	Sensor 1 Value	065'535	mV	1	R
		Current value of sensor 1, depending on the setting of the Sensor 1 Type		0 / 1		
		(Register No. 108)				
		[mV] if Sensor 1 Type (Register No. 108) is Active(1) [0 / 1] if Sensor 1 Type (Register No. 108) is Switch(4)				
10	9	-	_	_	_	_
11	10	Absolute volumetric flow	_	UnitSel	0.001	R
		Absolute flow in unit selected (Register No. 118) LowWord				
		Lower 16 bit of 32 bit value				
12	11	Absolute volumetric flow				
		Absolute flow in unit selected (Register No. 118) HighWord Upper 16 bit of 32 bit value				
13	12	Setpoint Analog	010'000	%	0.01	R
		Shows the setoint in % if actuator is control by analog signal				



### **Modbus Register Description** Description Unit No. Address Range Scaling Access Comment **Enumeration** R/W 100 99 **Bus Termination** 0: inactive 1: active Indicates if bus termination (120 $\Omega$ ) is enabled Default: inactive(0) Bus termination can be set with the configuration tools 101 100 Series Number 1st part Each device has an unambiguous series number, which is either impressed on or glued to the housing The series number consists of 4 segments, although only parts 1, 2 and 4 are displayed on Modus Example: 00839-31324-064-008 1st part: 00839 2<sup>nd</sup> part: 31324 4th part: 008 102 101 Series Number 2nd part R Series Number 4th part 103 102 R 104 103 Firmware Version R Firmware version of communication module Example: 302, Version 3.02 105 104 Malfunction and Service Information Mech travel increased R Bit2: Actuator cannot move Value is bit-coded. More than one bit can be set to 1 Bit8: Internal activity All bits not mentioned in the enumeration are not used for this actuator range Bit9: Gear disengaged Mechanical travel increased: The actuator has been moved outside the Bit10: Bus Watchdog triggered adapted working range Actuator cannot move: Mechanical overload e.g. blocked actuator, etc. Internal activity: Actuator performs a test run, adaption, etc. Gear disengaged: The gear disengaged button is pressed Bus Watchdog triggered: Timeout for the Bus Watchdog expired 106 105 107 106 Vmax 3'000...10'000 % 0.01 R/W Default: 10'000 Max has to be ≥ 30% 0: None 108 107 Sensor 1 Type R/W 1: Active / Hybrid If Setpoint Source (Register 119) is analog (Hybrid mode) the sensor type 1 2: can be set to Active(1) in order to see the Setpoint Analog in mV 3: -4: Switch Default: None(0) **Bus Fail Position** R/W 109 108 0: None / Last setpoint 1: Fast close Modbus communication is not monitored as standard. In the event of a 2: Fast open breakdown in communication, the actuator retains the current setpoint 3: Mid position The bus implementation tracks the Modbus communication. If neither the Setpoint (Register No. 1) nor the Override Control (Register No. 2) is (parameterized) renewed before the Timeout for Bus Watchdog (Register No. 110) expires, Default: None(0) the actuator controls to the Bus Fail Position Triggered bus watchdog is indicated in the Malfunction and Service Information (Register No. 105) R/W 110 109 Timeout for Bus Watchdog in s 0...3'600 s Default: 0 Time until Bus Fail will be detected. If Bus Watchdog = 0 then deactivated If Bus Fail Position (Register If Bus Fail Position (Register No. 110) different from 0, the Bus Fail Position No. 110) not None(0), then becomes active after the Timeout for Bus Watchdog is expired Default: 120

800-543-9038 USA 866-805-7089 CANADA 203-791-8396 LATIN AMERICA

# ePIV Modbus Register

### **Modbus Register Description** No. Address Description Range Unit Scaling Access Comment Enumeration Nominal volumetric flow 111 110 m<sup>3</sup>/h R 112 111 113 112 Nominal volumetric flow UnitSel 0.001 R Vnom in unit selected (Register 118) LowWord Lower 16 bit of 32 bit value 114 113 Nominal volumetric flow Vnom in unit selected (Register 118) HighWord Upper 16 bit of 32 bit value 115 114 \_ 116 115 117 116 Control Mode 0: Position control R/W Flow control 117 Unit Selection Flow R/W118 $0: m^3/s$ 1: m<sup>3</sup>/h 2: I/s 3: I/min 4: I/h 5: gpm 6: cfm Default: m<sup>3</sup>/h(1) 119 118 Setpoint Source 0: Analog R/W

1: Bus

Default: Bus(1)

Belimo Americas

USA, Latin America, and the Caribbean: www.belimo.us

Analog: Setpoint from analog signal 0 ... 10 V on wire 3

Bus: Setpoint from Modbus (Register 1)

Canada: www.belimo.ca Brazil: www.belimo.com.br

Belimo Worldwide: www.belimo.com

